



Note: J2-Y controls 2KV supply, Low = "ON"  
 (APPLIES TO FEC100/200)